

Lyle RG8X connector

Incorrect installation video. He puts a washer in the wrong place. That causes the shield braid to not be properly sandwiched between metal. This video will make the shield connection unreliable....




<https://www.youtube.com/watch?v=oLpuVYj5kWs>




<https://www.amazon.com/UHF-Male-Coax-Connector-pl259/dp/B0D4VWGLY7?th=1>

Correct installation is on Amazon.

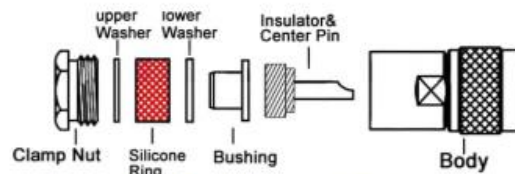


Installation Steps


1. Thread the nut, upper washer and silicone ring onto the cable.

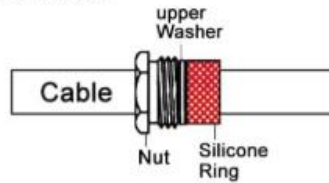


2. Use a tool to peel off the cable jacket.

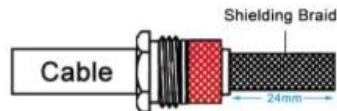


3. Put the lower washer on the shielding layer and open the shielding layer

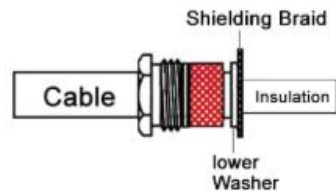


4. Press in bushing and trim excess shielding.

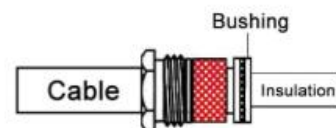

5. Cutting cable insulation.

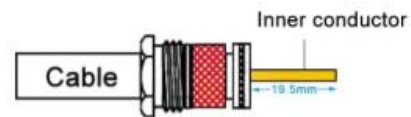

6. Install the upper insulation & center pin.

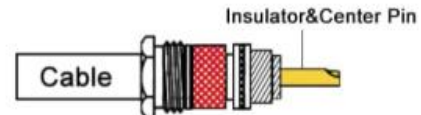

7. Solder cable inner conductor and connector center inner pin.



8. Install the connector body. Use a wrench to lock the nut

